


## OPERATING INSTRUCTION

**CAUTION:** Do not keep the keys in the safe itself.

### 1. OPENING THE SAFE FOR THE FIRST TIME

- Move the plate (Z) (see diagram 1) in anti-clockwise direction.
- Insert the key into the lock and turn it clockwise to open the door.

Diagram 1

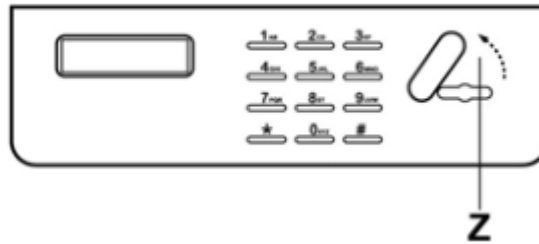

### 2. INSTALLING THE BATTERIES

The safe requires 4×size 'AA' (1.5V) batteries. Remove the battery cover (Y) (see diagram 2) and install the batteries into the compartment. Ensuring the batteries are fitted with the correct corresponding polarity. Use of alkaline batteries is recommended.

### 3. OPENING THE SAFE AFTER INSTALLING THE BATTERIES

- Press "\*", and it will show "ENT CodE" on the screen.
  - Input one of the two sets of factory-preset codes:  
8,8,8,8 (user code) or 0,0,0,0 (master code) and confirm by pressing "#".
  - If the code is correct, you will hear a confirmation sound, on display show "OPEN" and the door will open.
- when you're inputting the code, you can delete the numbers which are input wrongly by pressing button "\*".

### 4. PROGRAMMING THE CODE

**NOTICE:** The safe can be programmed with two sets of codes. For your safety, after opening the safe and installing the batteries, you should program two sets of your new codes to take the place of two sets of factory-preset codes.

Programming the user code

- The code may only be programmed when the safe is unlocked: if necessary use the override key to open the safe.
- Press \* and simultaneously press 3, on display show 'SET COdE'.
- Enter your code combination (between 3-8 digits) then press #. You will now be asked to repeat the code you just entered (on display show 'rEPEAT'). Re-enter your code and press #.
- A sound and the display ' good' confirm that you have successfully programmed a new code. If you hear three short beeps and on display show 'Error', repeat step b and c.

Programming the master code

---

With door opened, press \* and simultaneously press 4, on display show 'OLd'. Input the old master code (factory preset master code: 0000), and press # for confirmation.

- c. You will hear two beeps, and the screen shows "NEU".
- d. Enter your new code combination (between 3-8 digits) then press #. You will now be asked to repeat the code you just entered (on display show 'AgAIN'). Re-enter your code and press #.
- d. The display shows ' good'. It means that the new master code is confirmed.

Notice: Test your code according to Step 5. If it works, you can close the door. Important: Before testing your code, you need to take off the key by turning it anti-clockwise. Otherwise, there would be 'Error' on display when inputting your code.

## **5. USING YOUR SAFE**

To open the safe, enter your personal code and confirm by pressing "#". You will hear a confirmation sound, on display shows "OPEN" and the door will open automatically.

Warning:

- a. If the code is wrong, you will hear three short beeps, and on display show 'Error'.
- b. If an intruder enters wrong codes for 3 times consecutively, the buzzer will be sound for 1 minute and display shows 'Error'.

To Close the safe door, Press\* followed by #. The bolts will lock the door and on display show 'CLOSE'

## **6. CODE DISPLAY CONTROL**

Press \* and simultaneously press 1, you can control the code display. When display shows 'dP-----', means the input codes will not display; when display shows 'dP COdE', means the input codes will display.

## **7. BUZZER CONTROL**

Press \* and simultaneously press 2, you can control buzzer sound. When display shows 'bUZZEr', means buzzer will work; when display shows 'SILENT', means buzzer will not work unless the warning buzzer.

## **8. OVERRIDE INSTRUCTION TO OPEN THE SAFE**

This safe has a manual override system operated by the keys supplied.

- a. Move the plate (Z) in anti-clockwise direction.
- b. Insert the key into the lock and turn it clockwise to open the door

Notice: For security reasons the key cannot be removed and the electronic lock is deactivated when the safe is opened using the mechanical override key. To remove the key, you must lock the safe using the key.

### 9. RE-ACTIVATING THE INTERIOR LIGHT

To re-activate the light press #, on display show 'LIgHT ON' and the light (X) (see diagram 2) will be turned on for another 30 seconds. The light is automatically activated when the safe door is opened with the electronic keypad. The light can be re-activated at any time.

### 10. BATTERY REPLACEMENT WARNING


To test the batteries: Press\*, if the batteries are low, on display will show 'Lo-bAT', and then you should replace the batteries.

### 11. REPLACING THE BATTERIES

The safe requires 4×size 'AA' (1.5V/LR6) batteries.

Open the safe, remove the battery cover, and replace the old batteries (see diagram 2).

Diagram 2

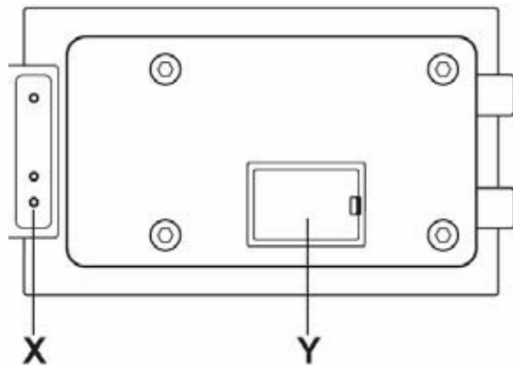

### 12. INSTALLING THE SAFE

To reduce the risk of theft it is essential that your safe is securely fixed. Please use the provided bolts to fix the safe horizontally and secure to a solid concrete floor or wall.

For your convenience, there are fixing holes both in the bottom and on the back, please fix the safe correctly according to diagram 3.

Diagram 3

